



MATERIAL TRAILER

Owner's Manual



Lufkin Manufacturing
20020 Interstate 30
Benton, AR 72019
Ph: (501) 316-4040
Fax: (501) 634-4141
www.lufkinmfg.com

Table of Contents

About your MATERIAL TRAILER.....	2
Operating Instructions.....	3
Connecting Instructions	4
Dumping Instructions	5
Hydraulic System Maintenance	6
Monthly Maintenance	7
Air System Parts	8
Draft Arm Parts.....	9
Draft Arm Parts List.....	10
Hydraulic Cylinder.....	11
Hydraulic Cylinder Replacement Service Parts.....	12
Lights	13
Junction Box & 7-Way Receptacle.....	14
Suspension Parts	15
Air Suspension	17
Tailgate Latch Assembly	18
Tailgate Hinge Assembly	19
Upper 5 th Wheel.....	20
Parts List	21
<i>Lufkin Manufacturing</i>	
Warranty	23

About Your MATERIAL TRAILER

Operating Instructions

1. **DO NOT** operate this equipment until you have been properly trained in its operation.
2. When the vehicle is in transit the hoist control valve **MUST BE** kept in neutral and the PTO disengaged.
3. Tailgate controls **MUST BE** locked when this vehicle is in transit.
4. **DO NOT** overload the trailer.
5. When the truck is stored or not in use, the body **MUST BE** in the fully lowered position, and resting on the chassis or hoist frame. Ignition key **SHOULD BE** removed to prevent tampering by un-authorized personnel.
6. Inspect the hydraulic oil level and quality regularly and be sure to change it regularly and especially when a new cylinder is installed.
7. Inspect all hydraulic hoses regularly.
8. Regularly lubricate the cylinder's end-mounts.
9. Be sure the cylinder is free of entrapped air (bleed cylinder of excess, See page 6).
10. When the body is in the elevated or raised position for any repairs or adjustments, it **MUST BE** securely propped or blocked so it cannot fall on anyone.
11. The Landing support legs are attached to the draft arm, which prevents the upper fifth wheel plate from falling to the ground when the trailer is unhooked. This eliminates the need for chains and hooks to hold the draft arm assembly in the up position. Before attempting to move the trailer, the telescoping legs should be collapsed and the support pin with the safety clip should be properly installed.

CAUTION

The Landing Support Legs are not designed for supporting a loaded trailer.

Connecting Instructions

Tractor – Trailer operation is performed by following these instructions:

1. Prepare the tractor 5th wheel to receive the trailer king pin by pulling the locking handle to the open position. The jaws will automatically lock when contact is made with the king pin. Back the truck until the truck 5th wheel just touches the trailer 5th wheel.

NOTE – All Frameless and High Dump trailers must be used with a blocked 5th wheel.

2. Make glad hand connections, lighting plug and hydraulic hose connections. Supply air to the trailer, then lock the trailer brakes.
3. Back the tractor into position to engage the 5th wheel until the jaws lock and the locking handle is in the locked position. Do not attempt operations without the proper 5th wheel.
4. Inspect trailer or proper brake operation and electrical function. Check hydraulic lines to insure proper hook-up.
5. For complete connecting instructions see the United States Department of Transportation; Federal Motor Carrier Safety Administration regulations 393.70; 393.71; D1; V1; V2

Dumping Instructions

1. This vehicle **MUST BE** kept on level ground before dumping. The hydraulic cylinder cannot withstand sideloading.
2. **DO NOT** raise the trailer on ground that has been recently excavated or filled without being properly compacted.
3. **DO NOT** raise the trailer unless the tractor and trailer are in line.
4. **DO NOT DUMP BENEATH HIGH-VOLTAGE POWER LINES.**
5. The operator **MUST REMAIN** at the controls during the dumping cycle.
6. The tailgate controls **MUST BE** released before the front of the body is 2 feet (0.6m) above the chassis frame.
7. When operating **DO NOT** allow anyone to stand in or move through the area where the hoist operates or into an area where an upset load might fall.
8. **DO NOT** jerk the truck / trailer when trying to dump a sticky load.

Hydraulic System Maintenance

Hydraulic Fluid

A good grade of non-foaming 10 weight hydraulic fluid should be used. Before filling, be sure that the oil reservoir is clean. Dirty oil containing dirt and metal particles is nearly always responsible for premature pump failure. Periodic inspection should be made for dirt or sludge in the bottom of the reservoir. Avoid racing the engine to increase pump RPM as this will cause overheating of the pump, resulting in oil breakdown.

Air Entrapment

Air entrapped in the hydraulic system causes erratic operation such as spongy response for the hoist or jerky operations. Follow these steps to properly purge system:

- A. Loosen the bleeder valve located on the top pin eye, which is accessible through the door on the front of the trailer.
- B. Operate the pump at slow engine speed until the air is eliminated and hydraulic fluid is present.
- C. Tighten the bleeder valve cap securely to stop the oil flow. The hoist should operate smoothly.


Inspection

Hydraulic system is subjected to extreme service due to vibration; therefore, periodic inspection is necessary to insure continuous service. Check the pump and the hoist connection for leakage. The linkage to the PTO and the pump valve should be checked for proper operation.

Monthly Maintenance


1. Lubricate upper tailgate hinge pins (L & R)
2. Lubricate draft arm pins front and rear
3. Lubricate auxiliary draft arm pins front and rear
4. Bleed air out of hoist (see below)
5. Check suspension bolts – U-bolts (Trunion axle)*
6. Check oil level in wheel hubs
7. Inspect for oil leakage on inside of wheel hub
8. Lubricate tailgate latch assembly
9. Lubricate upper coupler plate (2 places)
10. Check wheel nuts for tightness

*** See manufacturer's recommendation**



Draft Arm Parts

Note:
Pre-1995 MATERIAL TRAILER
parts Call Lufkin Manufacturing
800-333-3096

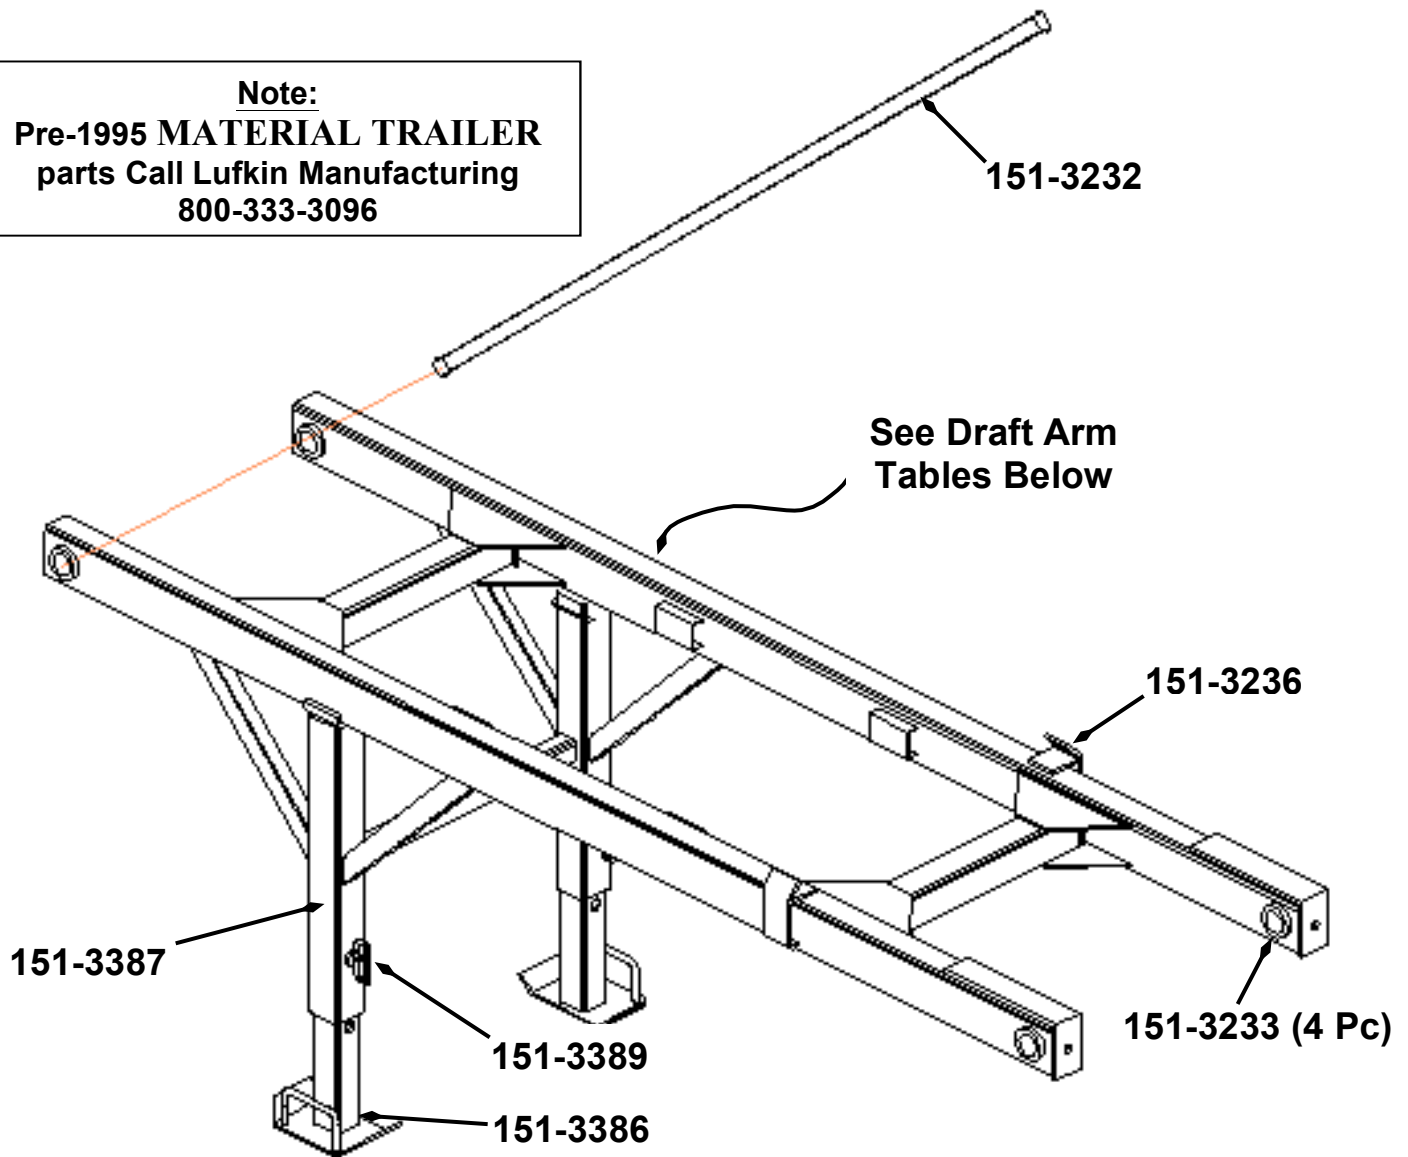

151-3384 Complete Leg Assembly
151-3385 Leg Assembly - One Side

MATERIAL Frameless

<u>Length</u>	<u>Draft Arm</u>
22-24'	151-3210
26'	151-3211
28-30'	151-3213
32'	151-3214

MATERIAL High Dump

<u>Length</u>	<u>Draft Arm</u>
22'	151-3215
24'	151-3216
26'	151-3220
28'	151-3221 SH
30'	151-3221 LH
32'	151-3222

Draft Arm Parts List

Draft Arm


151-3210 – 22'-24' Frameless Draft Arm
151-3211 – 26' Frameless Draft Arm
151-3213 – 28' - 30' Frameless Draft Arm
151-3214 – 32' Frameless Draft Arm
151-3215 – 22' High Dump Draft Arm
151-3216 – 24' High Dump Draft Arm
151-3220 – 26' High Dump Draft Arm
151-3221SH – 28' High Dump Draft Arm
151-3221LH – 30' High Dump Draft Arm
151-3222 – 32' High Dump Draft Arm
151-3232 – Rear Draft Arm Pin
151-3233 – Bushing (4) Req'd
151-3236 – Draft Arm Guide (2) Req'd
151-3384 – Complete Landing Leg Assy
151-3385 – Landing Leg Assembly (1 Side)
151-3386 – Lower Landing Leg Assembly
151-3387 – Upper Landing Leg Assembly
151-3389 – Landing Leg Pin

Auxiliary Draft Arm

151-3230 – 22' - 28' 1994 or earlier
151-3228 – 22' 1995 and later
151-3229 – 24' – 26' 1995 and later
Call Lufkin Manufacturing— 28' 1995 and later


Hydraulic Cylinder

COMMERCIAL

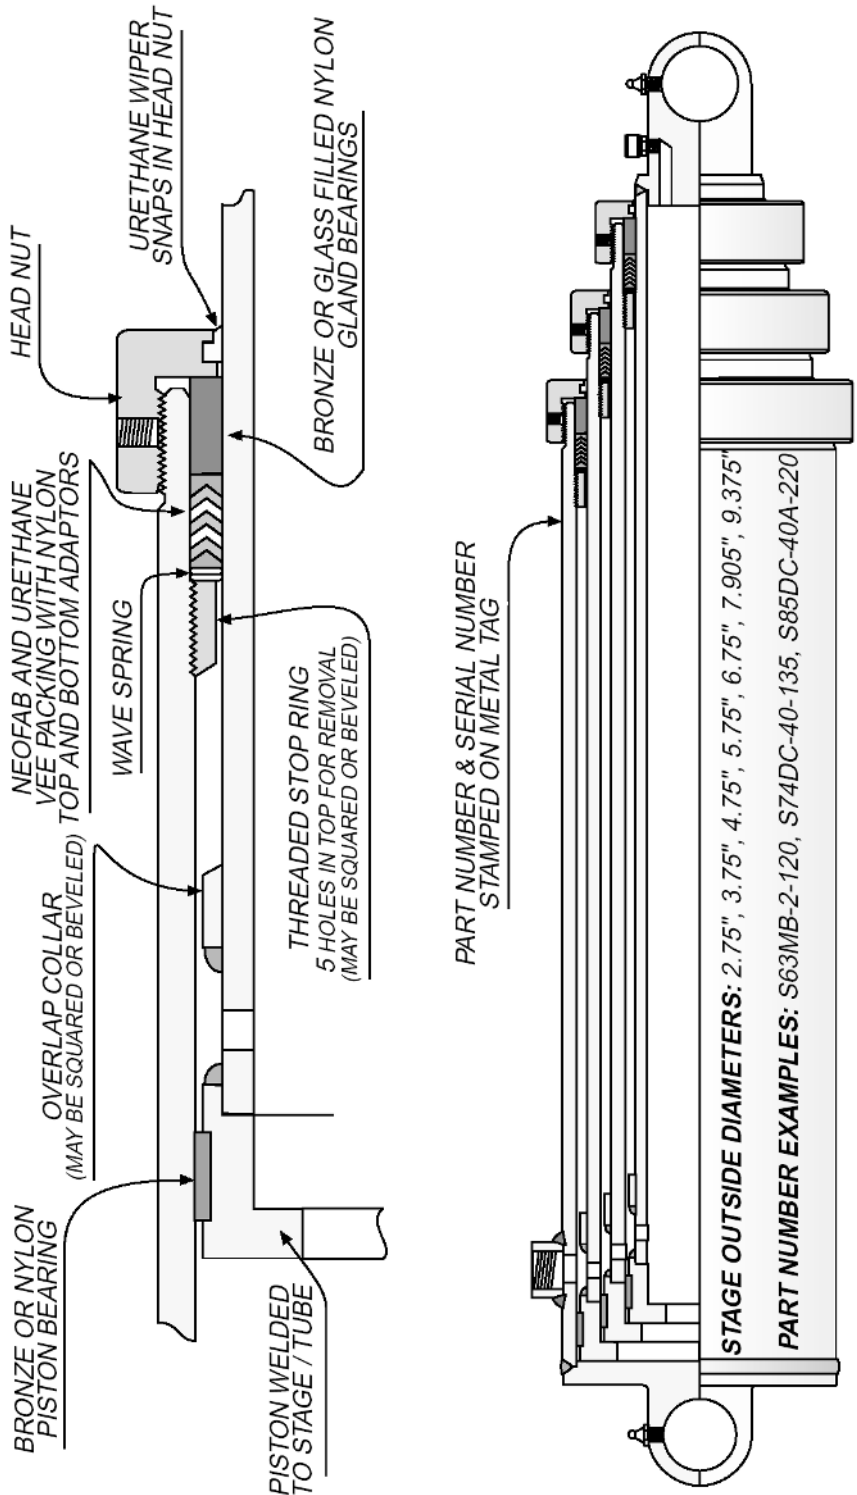

Parker Hannifin Corporation
Mobile Cylinder Division
Youngstown, OH

Genuine Replacement Service Parts

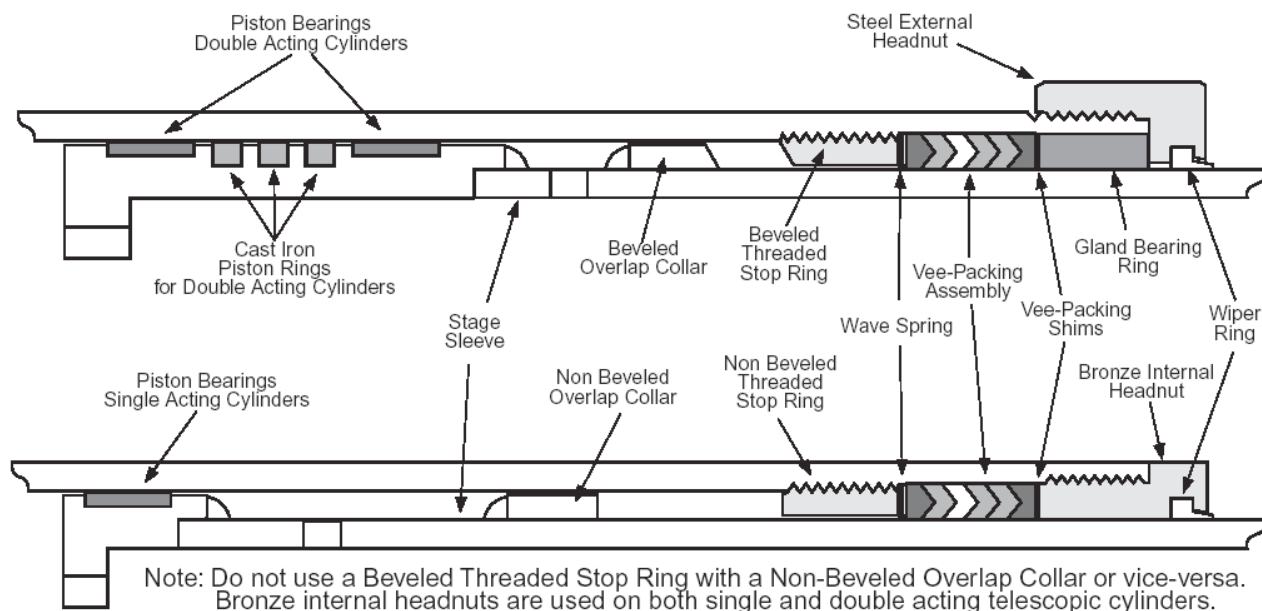


Following are service parts used on STANDARD DESIGN COMMERCIAL cylinders

Note: Commercial Hydraulics manufactures many different types and designs of cylinders. If you are not sure of service parts required please refer to the Cylinder Assembly print.

Description	2.75" Stage	3.75" Stage	4.75" Stage	5.75" Stage	6.75" Stage	7.905" Stage	9.375" Stage
Vee-Packing Assembly with Shims	375-9009-017 AJ3009-27	375-9009-034 AJ3009-37	375-9009-018 AJ3009-47	375-9009-019 AJ3009-57	375-9009-020 AJ3009-67	375-9009-021 AJ3009-79	375-9009-022 AJ3009-93
Wiper Ring	391-3882-061 Y3026-27	391-3882-053 Y3026-37	391-3882-054 Y3026-47	391-3882-055 Y3026-57	391-3882-056 Y3026-67	391-3882-057 Y3026-79	391-3882-058 Y3026-93
Gland Bearing Glass Filled Nylon	391-2682-001 J1003-1-1	391-2682-002 J1003-1-2	391-2682-003 J1003-1-3	391-2682-004 J1003-1-4	391-2682-005 J1003-1-5	391-2682-006 J1003-1-6	391-2682-007 J1003-1-7
Gland Bearing Bronze	375-9003-064 AH1003-27	375-9003-044 AH1003-37	375-9003-045 AH1003-47	375-9003-046 AH1003-57	375-9003-063 AH1003-67	375-9003-041 AH1003-79	375-9003-066 AH1003-93
Wave Spring	391-3581-320 P1327-27	391-3581-300 P1327-37	391-3581-301 P1327-47	391-3581-302 P1327-57	391-3581-303 P1327-67	391-3581-304 P1327-79	391-3581-310 P1327-93
Threaded Stop Non-Beveled	375-4020-001 F4020	375-3020-002 F3020	375-6020-002 F6020	375-5020-001 F5020	375-7020-001 F7020	375-8020-001 F8020	375-9020-001 F9020
Threaded Stop Beveled	375-3020-110 AG3020-1-27	375-3020-111 AG3020-1-37	375-3020-112 AG3020-1-47	375-3020-113 AG3020-1-57	375-3020-114 AG3020-1-67	375-3020-120 AG3020-2-79	375-3020-119 AG3020-2-93
Piston Bearing Glass Filled Nylon	391-2684-123 U3023-32	391-2684-069 U3023-42	391-2684-070 U3023-52	391-2684-071 U3023-62	391-2684-072 U3023-72	391-2684-073 U3023-84	391-2684-098 U3023-98
Piston Bearing Bronze	N/A	375-9023-079 AM3023-42	375-9023-038 AM3023-52	375-9023-039 AM3023-62	375-9023-040 AM3023-72	375-9023-041 AM3023-84	375-9023-042 AM3023-98
Cast Iron Piston Ring	391-2683-010 X78-3.25-1	391-2683-014 X78-4.25	391-2683-019 X78-5.25	391-2683-024 X78-6.25	391-2683-029 X78-7.25	391-2683-034 X78-8.437	391-2683-042 X78-9.88
Steel External Headnut	391-1470-162 YA3011-27	391-1470-163 YA3011-37	391-1470-164 YA3011-47	391-1470-165 YA3011-57	391-1470-166 YA3011-67	391-1470-167 YA3011-79	391-1470-177 YA3011-93
Bronze Internal Headnut	391-1470-079 MA3011-27	391-1470-070 MA3011-37	391-1470-071 MA3011-47	391-1470-072 MA3011-57	391-1470-073 MA3011-67	391-1470-074 MA3011-79	391-1470-075 MA3011-93

Lights

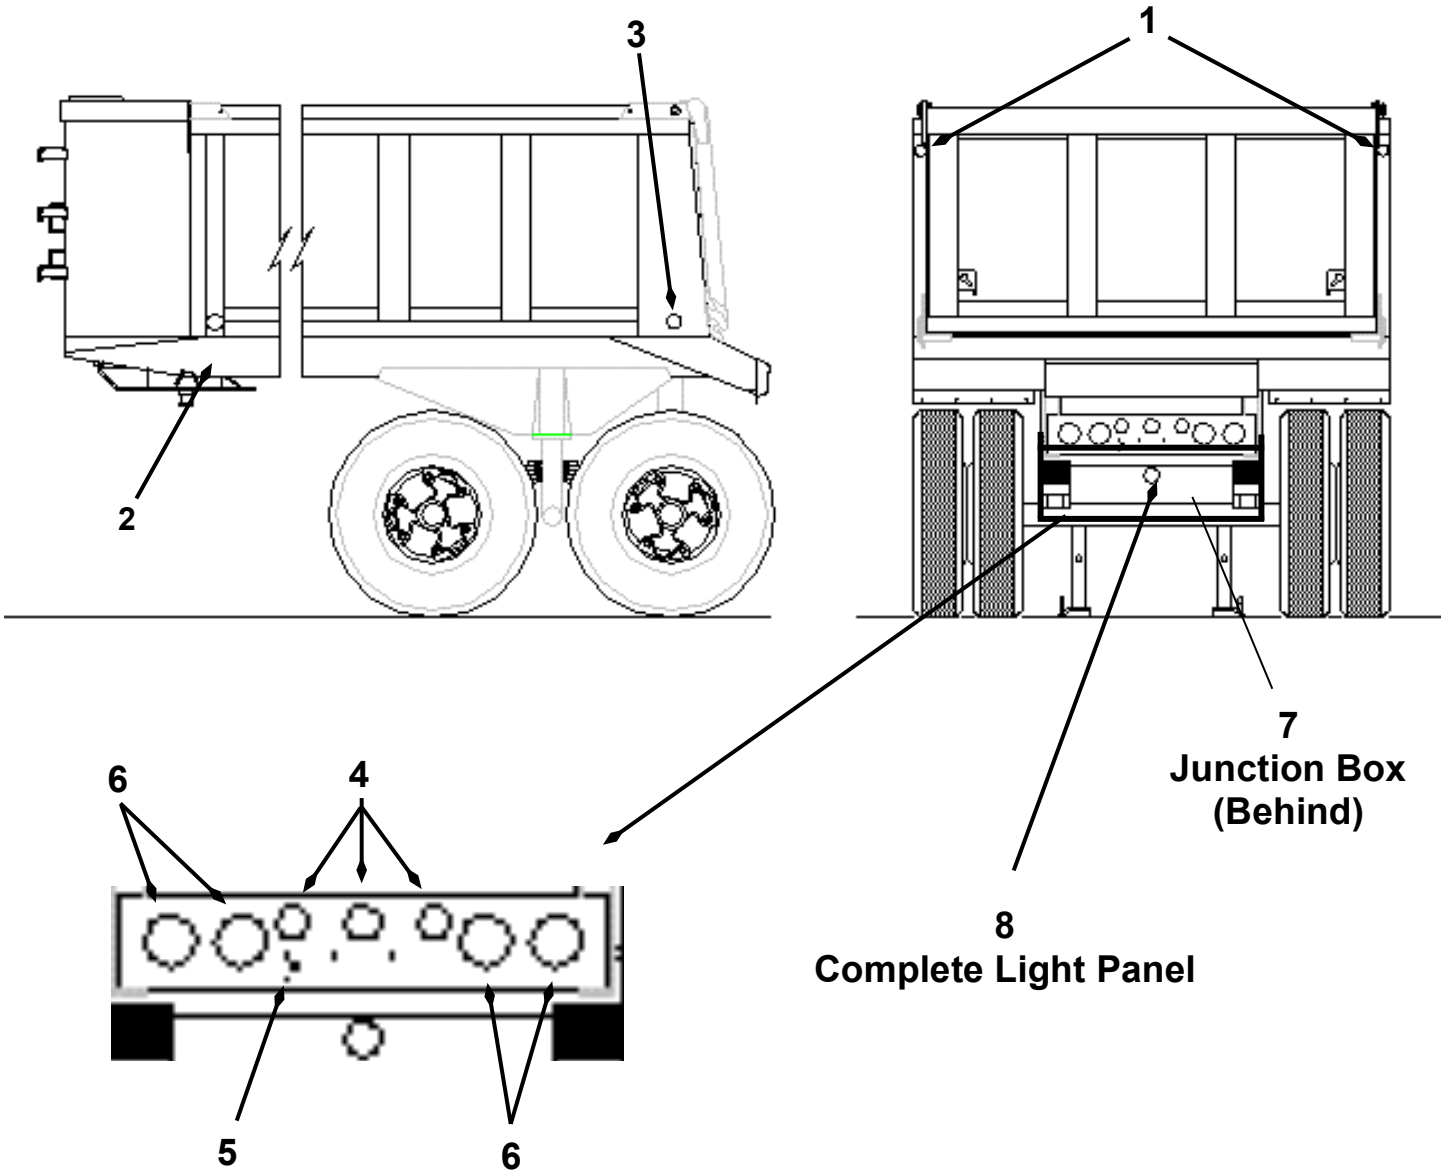

LEGEND

DRAWING NUMBER	QUANTITY REQUIRED	INCANDESCENT PART NUMBER	LED PART NUMBER	HARNESS PART NUMBER	GROMMET PART NUMBER
1	2	151-3332	151-3432	151-3411	151-3335
2	2	151-3333Y	151-3433Y	151-3412	151-3336
3	2	151-3333R	151-3433R	151-3413	151-3336
4	3	151-3333R	151-3433R	151-3414	151-3336
5	1	151-3338	-----	151-3414	-----
6	4	151-3334	151-3434	151-3415 L/R	151-3337
7	1	151-3339	-----		
8	1		151-3330		

Junction Box & 7-Way Receptacle

Wiring Color Code

White : Ground

Black : Clearance, Side Marker & Ident

Yellow: Left Turn & Hazard


Red: Stop Lamps & Anti-Lock Secondary

Green: Right Turn & Hazard

Brown: Tail & License Plate

Blue: Auxiliary Circuit / ABS*


* On trailers produced before 3-1-98, the Auxiliary Circuit was not used for ABS

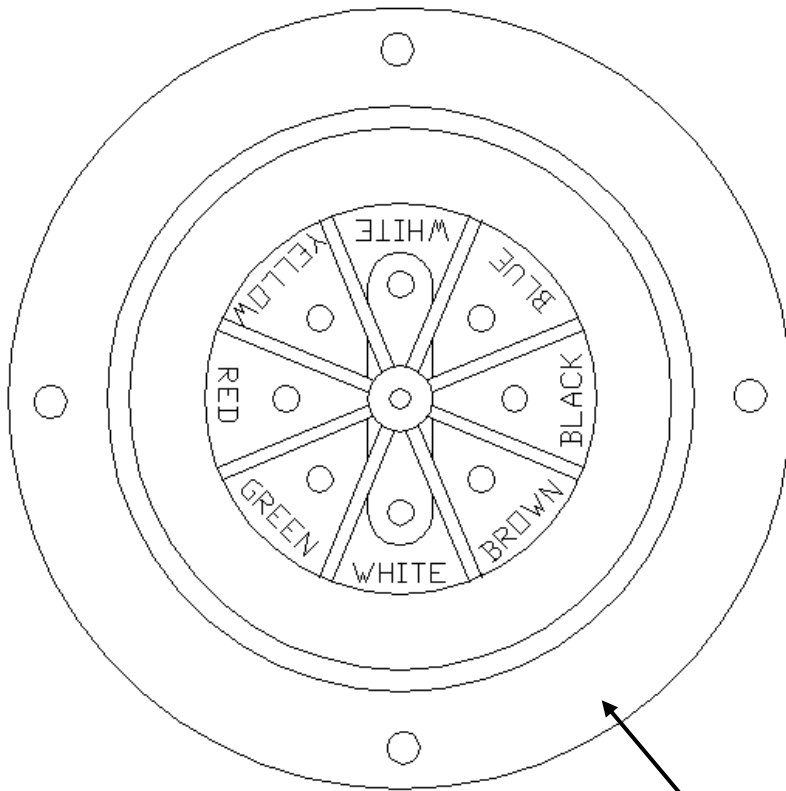

Junction Box – (Interior View)

151-3339

151-3331

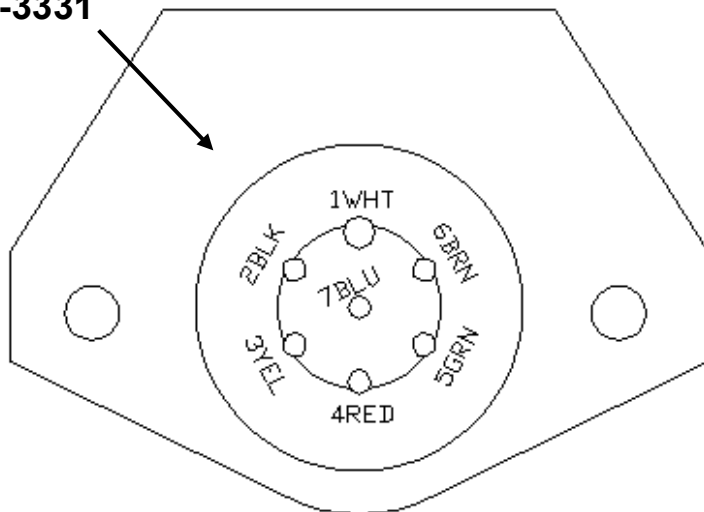

7-Way Receptacle (Rear View)



7-Way Receptacle


<u>Terminal</u>	<u>Wire Color</u>
8	WHT (White)
9	BLK (Black)
10	YEL (Yellow)
11	Red (Red)
12	GRN (Green)
13	BRN (Brown)
14	BLU (Blue)

Suspension Parts

- NOTES:**
1. 37.0" SPRING CENTERS MAX. FOR 47.0" BETWEEN TIRES.
 2. 10.00" DIM. IS 10.38" WITH ITEM 2.
 3. STRADDLE PLATE SIZES TO CUSTOMER SPECIFICATIONS.
 4. REFER TO RETORQUE STICKER FOR TORQUE SPECS AND RETORQUE INTERVALS.
 5. WELD AS INDICATED BY XXXX AND DWG#11621. CONSULT AXLE MFG. FOR PROPER WELDING TECHNIQUES AND WELD PLACEMENT. WELDING INSTRUCTIONS SHOWN ON DWG#11621 ARE SECONDARY TO AXLE MFG. REQUIREMENTS.
 6. APPROXIMATE VALUES.
 7. ON TS-LW-50 ADD SP-0083 (SHIM) BETWEEN ITEMS 12 AND 14.
 8. PART NUMBER DEPENDS ON LENGTH.

DO NOT WELD ON SPRING

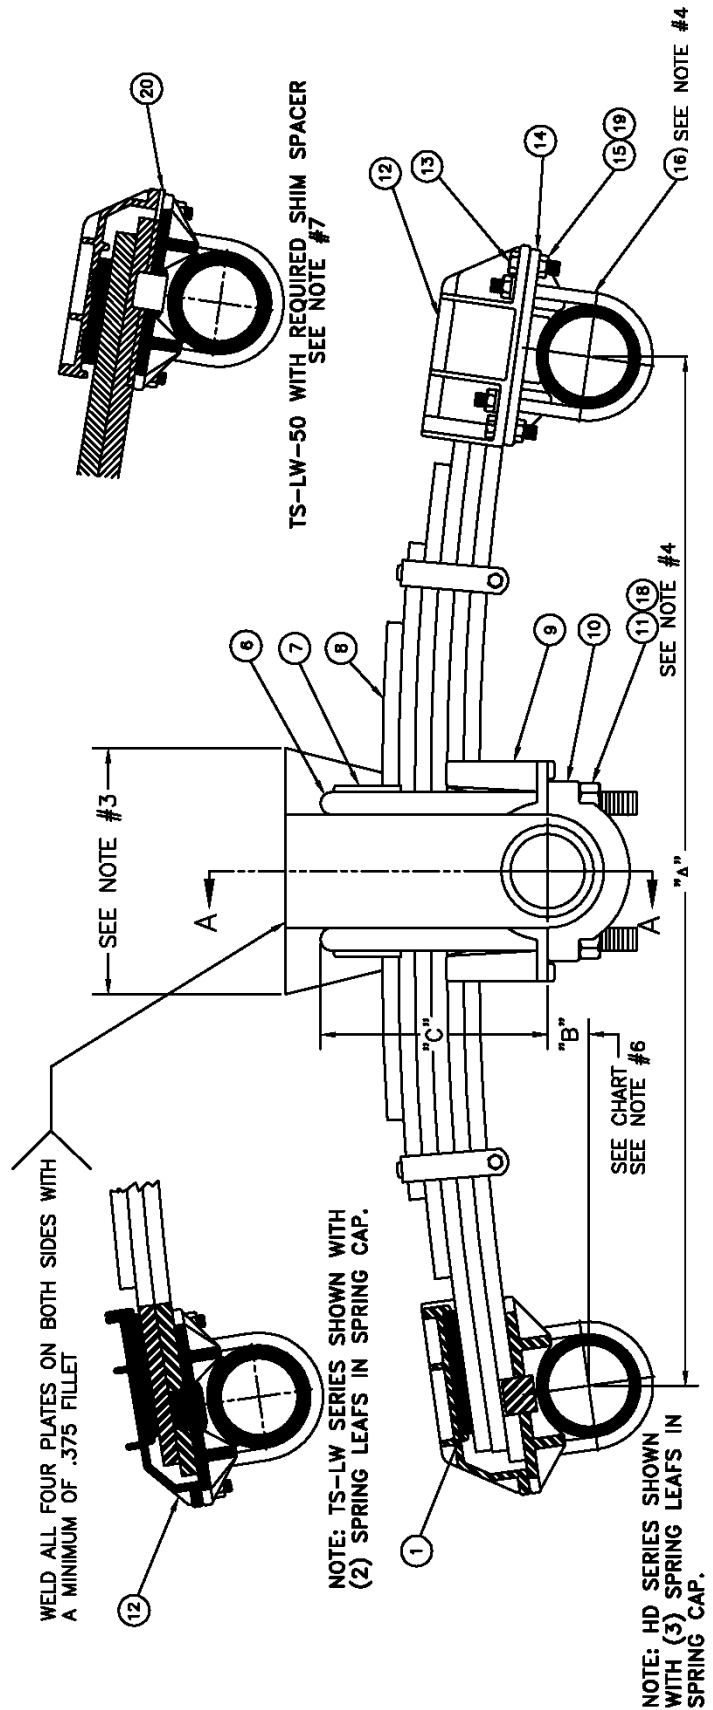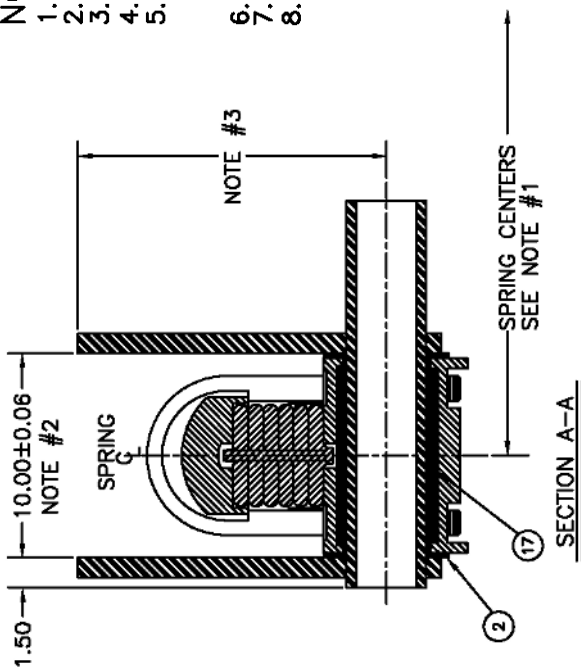

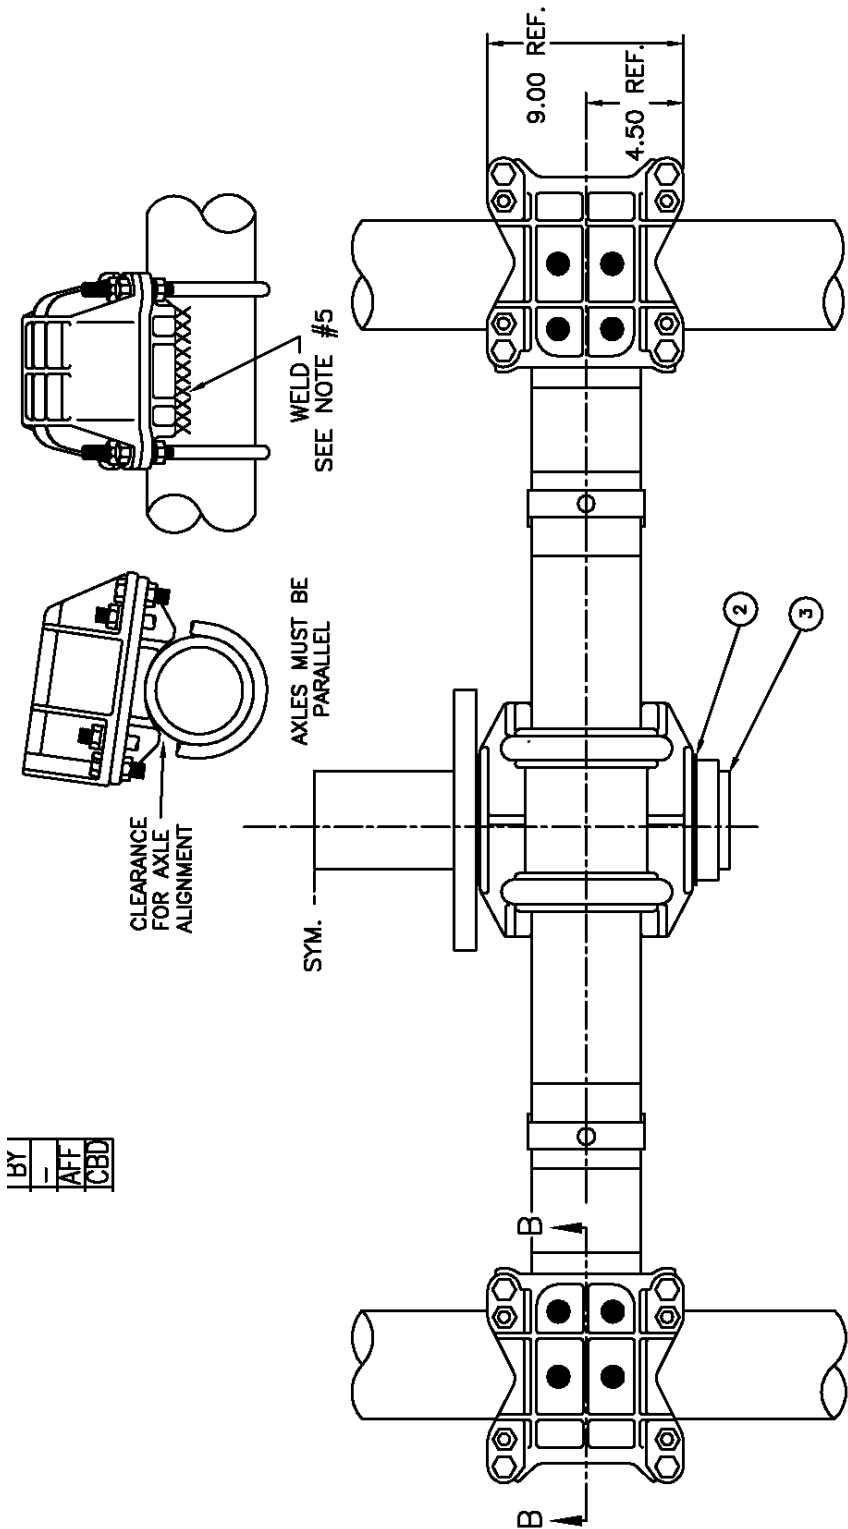

BY
-
AFF
CBD

ITEM	PART NO.	D.S.	QTY.	DESCRIPTION
1	SP-0193	A	4	POLYURETHANE PAD
2	SP-0038	A	4	WASHER (OPTIONAL)
3	NOTE 8	A	1	STRADDLE TRUNION TUBE ASSEMBLY
4				
5				
6	SEE CHART	B	4	U-BOLT
7	SP-0003	C	2	SPRING CAP
8	SEE CHART	C	2	SPRING
9	SP-0001	C	2	TRUNION/SPRING CAP
10	SP-0006	C	2	TRUNION CAP
11	10003	CF	8	HIGH NUT 1.125 UNF.
12	SEE CHART	C	4	CAP-SPRING END
13	10034	CF	16	HEX BOLT 5/8-18 X 2" GR.8
14	SEE CHART	C	4	AXLE SPRING PIN ASSEMBLY
15	10029	CF	32	LOCK NUT .625 UNF. GR.8
16	SEE CHART	A	8	U-BOLT
17	SP-0225	A	2	POLYURETHANE BUSHING
18	10045	CF	8	1.125 WASHER
19	10032	CF	32	.625 WASHER
20	SP-0083	B	8	SHIM SPACER


SPRING DEFLECTION	PART NUMBER	"A" DIM.		"B" DIM.	"C" DIM.	ITEM 1
		UNLOADED	LOADED			
2.25	HD SM 44	50.50 ±.12	51.44 ±.12	1.88	10.91	SP-0193
2.25	HD SM 50	50.50 ±.12	51.44 ±.12	1.88	11.70	SP-0193
1.75	HD SM 60	53.00 ±.12	54.12 ±.12	1.38	13.28	SP-0193
1.31	LW SM 44	48.00 ±.12	49.19 ±.12	.94	10.62	SP-0193
1.62	LW SM 50	50.25 ±.12	51.81 ±.12	1.25	11.18	SP-0193
2.25	LW SM PAR50	50.00 ±.12	51.31 ±.12	2.19	9.62	SP-0193
1.75	HD SM 70	53.00 ±.12	54.00 ±.12	2.12	14.00	SP-0193

ITEM 6	ITEM 8	ITEM 12	ITEM 14		ITEM 16
			5" DIA. AXLE	5" SQ. AXLE	
SP-0023	SP-0056	SP-0007	SP-0036	SP-0048	SP-0021
SP-0023	SP-0057	SP-0007	SP-0036	SP-0048	SP-0052
SP-0022	SP-0243	SP-0007	SP-0036	SP-0048	SP-0052
SP-0023	SP-0058	SP-0016	SP-0036	SP-0048	SP-0021
SP-0023	SP-0061	SP-0016	SP-0036	SP-0048	SP-0021
SP-0249	SP-0056-P	SP-0007	SP-0036	SP-0048	SP-0021
SP-0187	SP-0170	SP-0007	SP-0036	SP-0048	SP-0021

Air Suspension Parts


RAR-240HD-1-17-25-OSW 25,000 lb. cap. 30,000 lb. air spring

manufactured
after 10-1-95

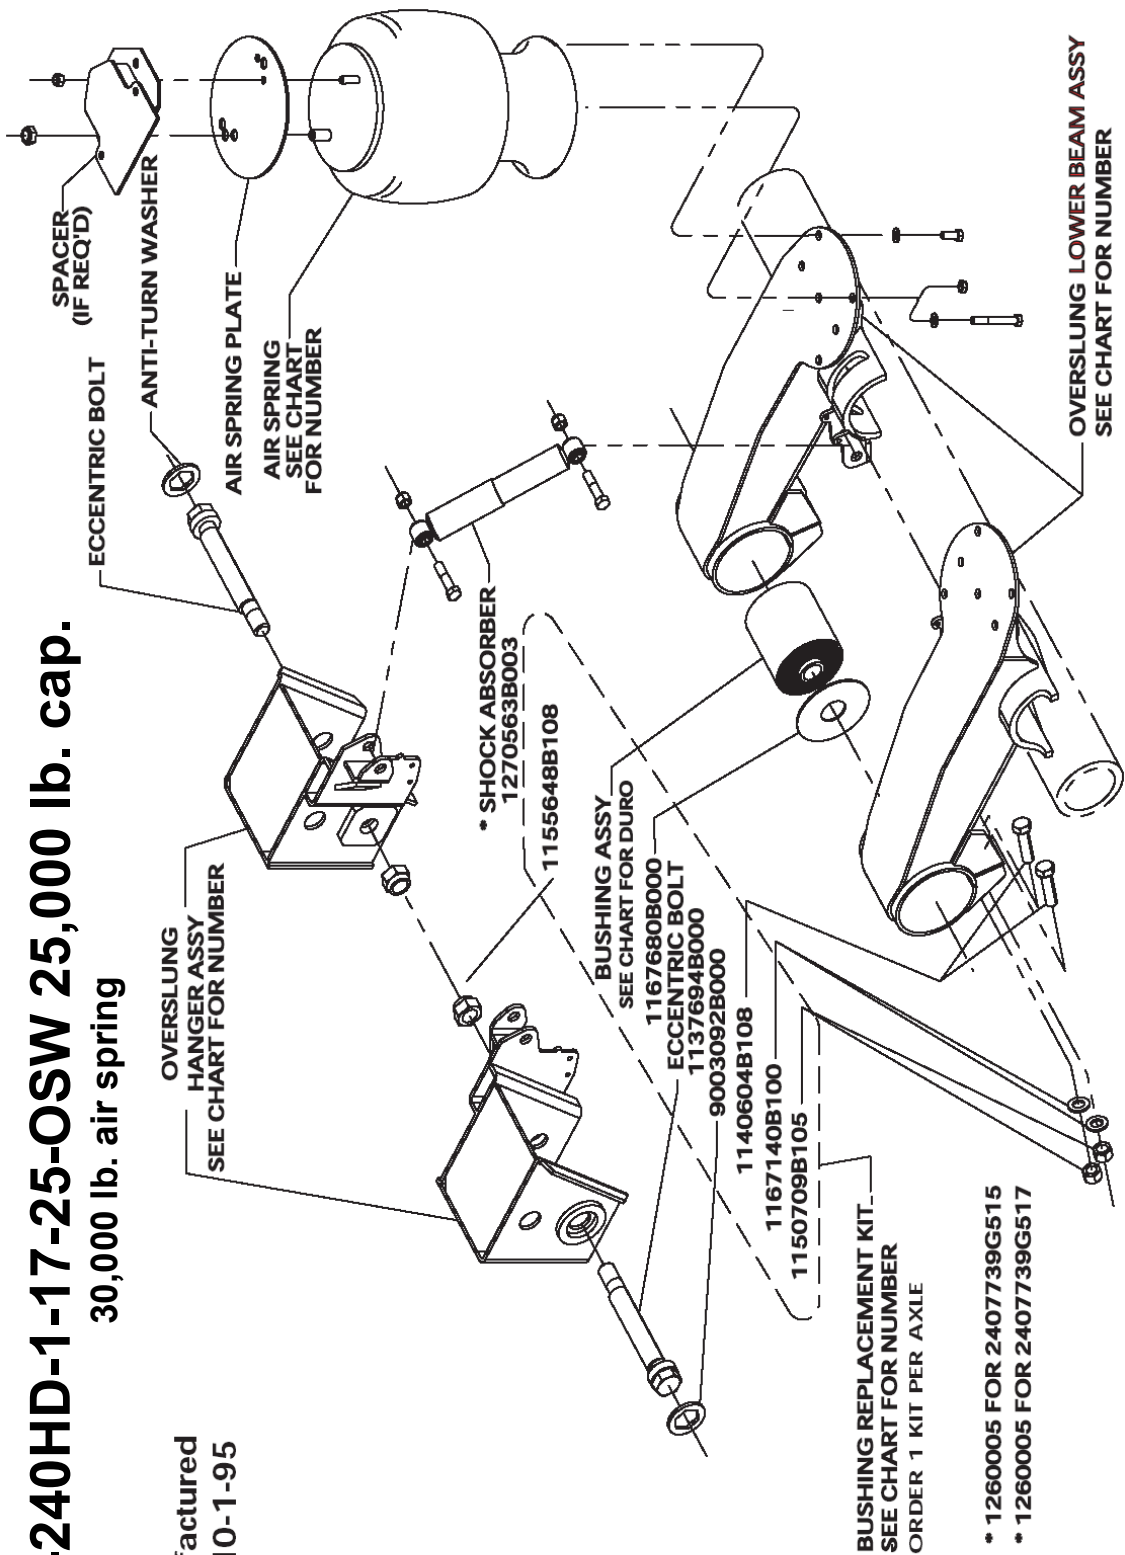

Suspension Part Number	Hanger Assy. LH/RH	Bushing/Beam Assy. LH/RH	Bushing Replacement Kit	Air Spring Replacement
2400076	3267739C100/200	5970171/72	6040029 (60 DURO)	1000008050G

Tailgate Latch Assembly Parts

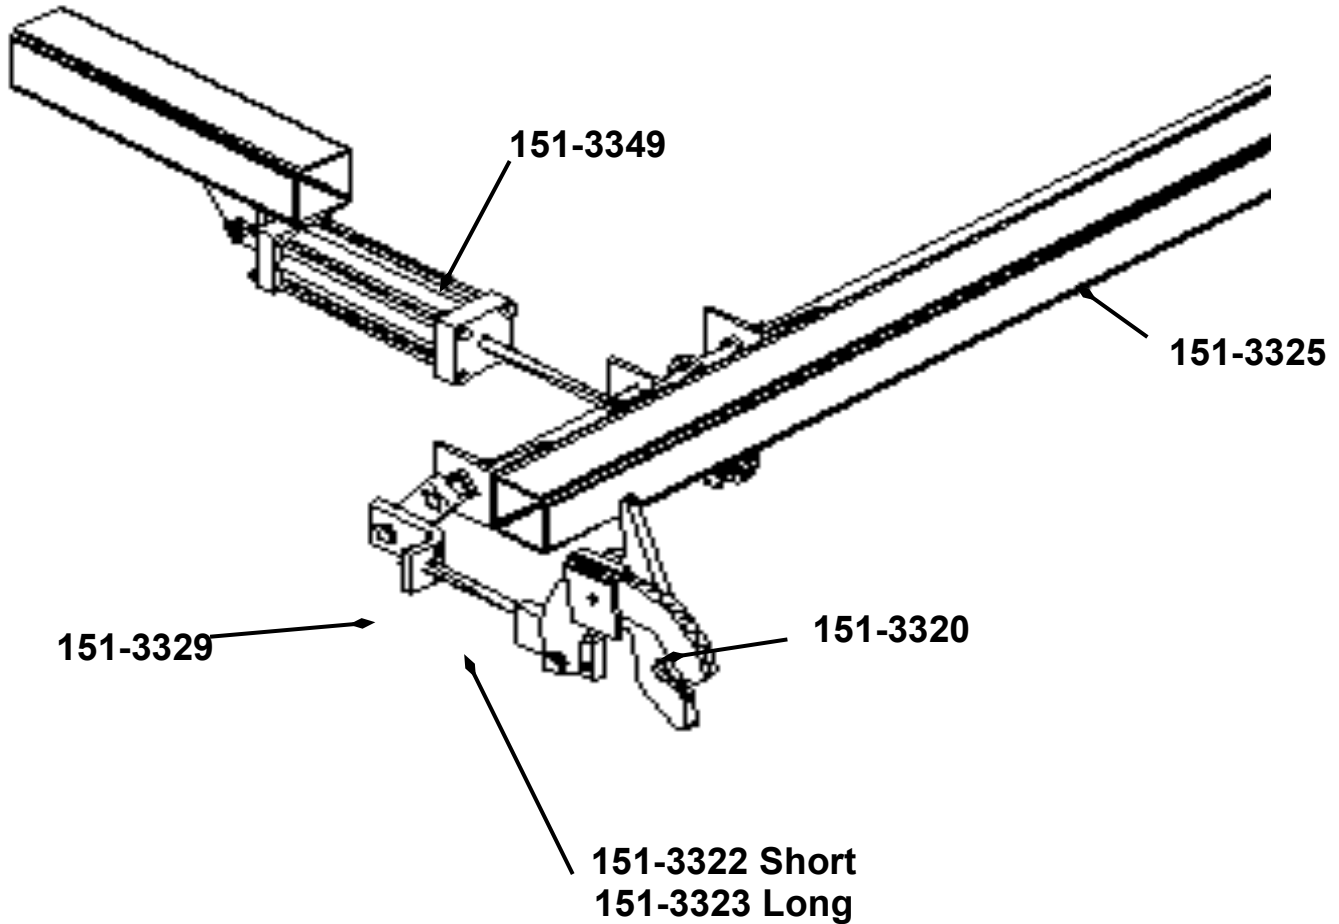


Tailgate Latch Assembly

151-3320 – Latch Assembly (Left or Right)
151-3320 – Short TG Latch Adjusting Rod
151-3323 – Long TG Latch Adjusting Rod
151-3325 – Complete Tailgate Latch Assy
151-3329 – Adjusting Angle
151-3349 – 2½" X 8" Cylinder

T-6 Valve

151-3352 Electric Valve
151-3353 Glad Hand Valve
151-3354 Push-Pull Valve


Tailgate Hinge Assembly Parts

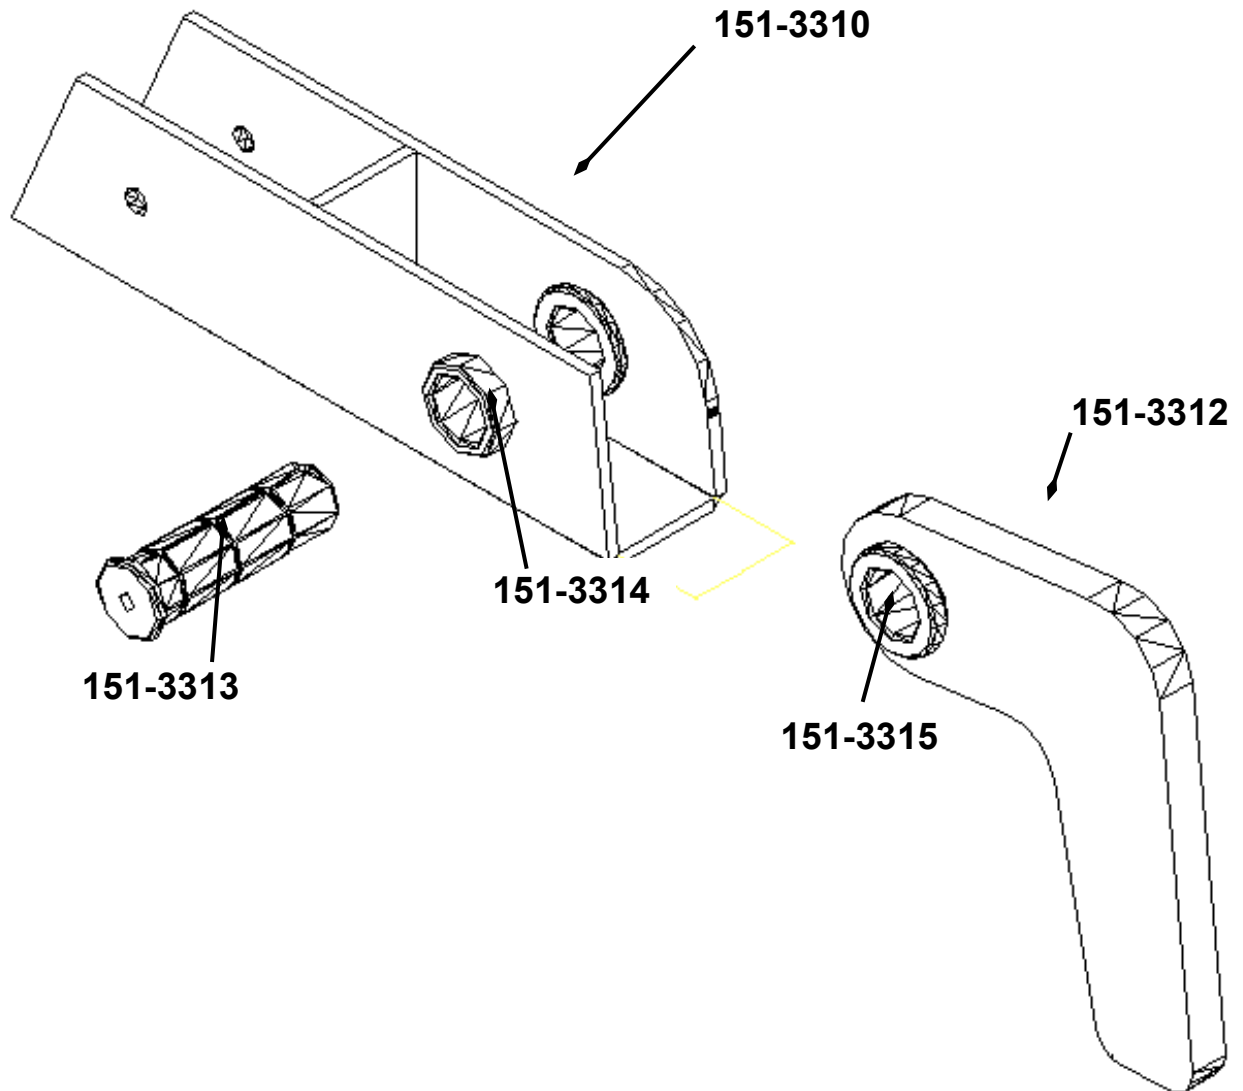

Tailgate Hinge Assembly

- 151-3310 – Tailgate Hinge Assembly
- 151-3312 – Hinge Arm WO/ Bushing
- 151-3313 – Hinge Pin
- 151-3314 – Short Bushing
- 151-3315 – Long Bushing

Upper 5th Wheel Parts

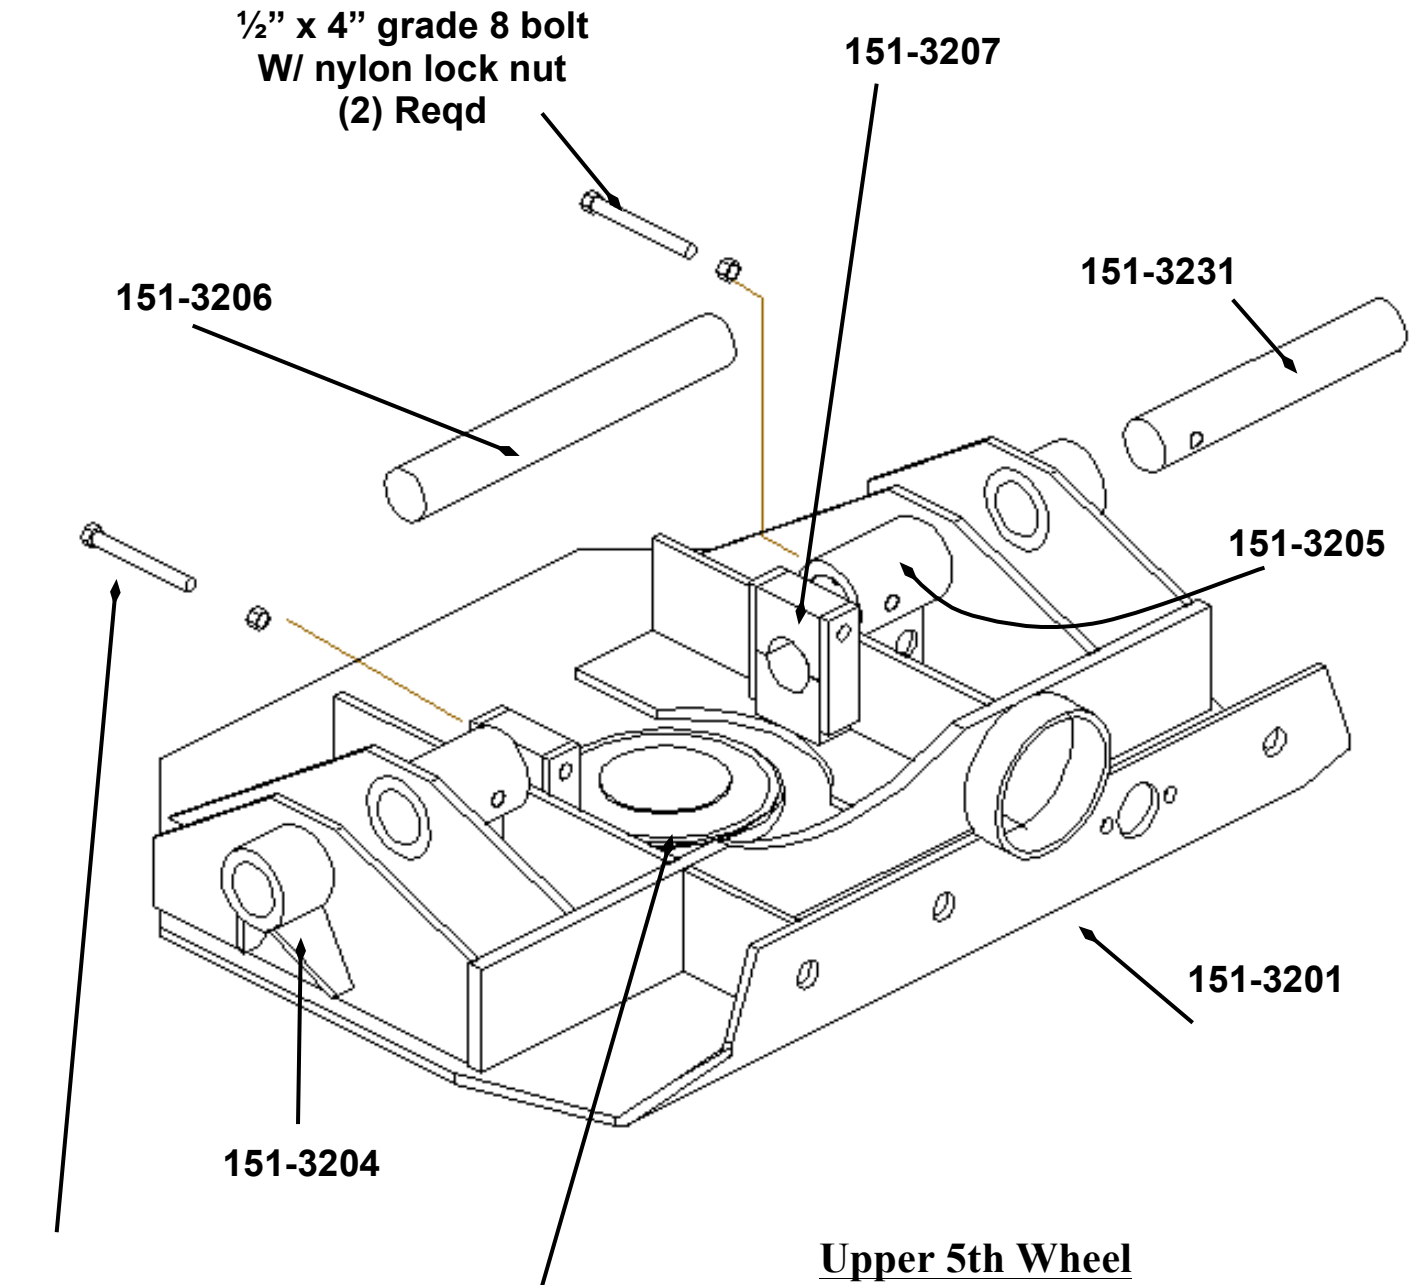

Upper 5th Wheel

- 151-3201 – 5th Wheel Assembly
- 151-3204 – Outer Bushing (2) Req'd
- 151-3205 – Inner Bushing (2) Req'd
- 151-3206 – Cylinder Pin
- 151-3207 – Cylinder Pin Block (2) Req'd
- 151-3208 – King Pin
- 151-3231 – Front Draft Arm Pin (2) Req'd

Parts List

Air System

151-3340 – Air Tank
 151-3341 – Spring Brake Valve
 151-3343 – Brake Chamber
 151-4101 – Sensor with Cable
 151-4102 – ABS Valve

Draft Arm

151-3210 – 22'-24' Frameless Draft Arm
 151-3211 – 26' Frameless Draft Arm
 151-3213 – 28' - 30' Frameless Draft Arm
 151-3214 – 32' Frameless Draft Arm
 151-3215 – 22' High Dump Draft Arm
 151-3216 – 24' High Dump Draft Arm
 151-3220 – 26' High Dump Draft Arm
 151-3221SH – 28' High Dump Draft Arm
 151-3221LH – 30' High Dump Draft Arm
 151-3222 – 32' High Dump Draft Arm
 151-3232 – Rear Draft Arm Pin
 151-3233 – Bushing (4) Req'd
 151-3236 – Draft Arm Guide (2) Req'd
 151-3384 – Complete Landing Leg Assy
 151-3385 – Landing Leg Assembly (1 Side)
 151-3386 – Lower Landing Leg Assembly
 151-3387 – Upper Landing Leg Assembly
 151-3389 – Landing Leg Pin

Hydraulic Cylinder List

TRAILER		STYLE	
Length	Frameless	Hi-Dump	Hi-Dump HS
22'	84-161		
24'	84-171	85-190	95-190
26'	85-190	85-220	95-220
28'	85-220	95-235	95-235
30'	85-220	95-235	95-235
32'	85-235	95-250	95-250

Lights

151-3330 – Complete Light Panel
 151-3332 – Upper Rear Marker Incan
 151-3333Y – Front Marker Incan
 151-3333R – Lower Rear Marker Incan
 151-3334 – Rear Brake Incan
 151-3335 – Grommet for Upper Rear (L&R)
 151-3336 – Grommet for Marker
 151-3337 – Grommet for Rear Brake
 151-3338 – License Incan
 151-3339 – Junction Box Incan
 151-3411 – Harness Upper Rear Marker
 151-3412 – Harness Front Side Marker
 151-3413 – Harness Lower Rear Side Mrkr
 151-3414 – Harness Lower Rear Mrkr/Lic
 151-3415 L/R – Harness Rear Brake
 151-3432 – LED Upper Rear Marker
 151-3433Y – LED Front Side Marker
 151-3433R – LED Lower Rear Marker
 151-3434 – LED Rear Brake

Suspension

- (1) SP-0193 – Polyurethane Pad
- (2) SP-0038 – Washer (optional)
- (3) Part # Depends upon Length
- (4) None
- (5) None
- (6) See Chart – U-Bolt
- (7) SP-0003 – Spring Cap
- (8) See Chart – Spring
- (9) SP-0001 – Trunion / Spring Cap
- (10) SP-0006 – Trunion Cap
- (11) 10003 – High Nut 1.125 UNF.
- (12) See Chart – Cap Spring End
- (13) 10034 – Hex bolt 5/8-18 x 2" GR8
- (14) See Chart – Axle Spring Pin Assy
- (15) 10029 – Lock Nut .625 UNF. GR8
- (16) See Chart – U-Bolt
- (17) SP-0225 – Polyurethane Bushing
- (18) 10045 – 1.125 Washer
- (19) 10032 - .625 Washer
- (20) SP-0083 – Shim Spacer

Tailgate Hinge

151-3310 – Tailgate Hinge Assembly
151-3312 – Hinge Arm WO/ Bushing
151-3313 – Hinge Pin
151-3314 – Short Bushing
151-3315 – Long Bushing

Tailgate Latch

151-3320 – Latch Assembly (Left or Right)
151-3320 – Short TG Latch Adjusting Rod
151-3323 – Long TG Latch Adjusting Rod
151-3325 – Complete Tailgate Latch Assy
151-3329 – Adjusting Angle
151-3349 – 2½” X 8” Cylinder

T-6 Valve

151-3352 – Electric Valve
151-3353 – Glad Hand Valve
151-3354 – Push-Pull Valve

Upper 5th Wheel

151-3201 – 5th Wheel Assembly
151-3204 – Outer Bushing (2) Req'd
151-3205 – Inner Bushing (2) Req'd
151-3206 – Cylinder Pin
151-3207 – Cylinder Pin Block (2) Req'd
151-3208 – King Pin
151-3231 – Front Draft Arm Pin (2) Req'd

Manufacturer's Warranty

Lufkin Manufacturing

Lufkin Manufacturing, referred to herein as the Manufacturer, warrants each new product of its own manufacture to be free from defects in material and workmanship, under normal use and service, to the original owner only, for a period of twelve (12) months from the date of purchase, subject to conditions and warranty extensions outlined below. Manufacturer's obligation under this warranty is limited to repair or replacement with a similar part of any part of the product of its manufacture which is returned to Manufacturer within thirty (30) days after discovery of the defect by the original owner, properly identified with transportation charges prepaid, and is returned to Manufacturer not more than twelve (12) months from the date of purchase by the original owner, provided that in Manufacturer's judgement the part is defective in material or workmanship.

Manufacturer will furnish without charge, FOB its plant a similar part to replace any part of a product of its manufacture which proves in Manufacturer's judgement to be defective in material or workmanship while in normal use and service during this warranty period.

The Manufacturer's warranty or obligation in connection with the sale of the product to the original owner:

1. Shall be expressly limited to the repair or replacement of defective parts, as stated above, all other damage and claims, statutory or otherwise, being hereby expressly waived by the purchaser and covers only those labor charges specifically authorized and approved by Manufacturer.
2. Shall not apply to failure or damage incurred through the original owner's neglect, lack of maintenance, misuse, accident, improper installation and use, reconstructing or modifying of assemblies and parts or through any other cause beyond the control of the Manufacturer.
3. Shall not apply if the product has been operated or used beyond the Manufacturer's recommended capacity.
4. Does not cover products of other manufacturers beyond such warranty as is made by such other manufacturer.
5. Requires that all warranty repairs shall be made by a Manufacturer approved facility. A Manufacturer's distributor must obtain Manufacturer's authorization before making warranty repair or replacement.
6. Includes a Warranty Extension to the original owner following the initial twelve (12) months, subject to the following percentages of all parts and labor cost: 13-24 months, eighty percent (80%); 25-36 months, sixty percent (60%); 37-48 months, forty percent (40%); and 49-60 months, twenty percent (20%).

No claim under this warranty shall be valid unless such claim is submitted to Manufacturer within sixty (60) months after date of sale, and within thirty (30) days after the discovery of the defect, which is the basis for such claim, whichever shall occur first.

The foregoing is Manufacturer's sole warranty and Manufacturer makes no other warranties of any kind whatsoever, express, implied, or statutory. All implied warranties or merchantability and fitness for a particular purpose, written or oral are hereby disclaimed by the Manufacturer.

In no event shall **Lufkin Manufacturing**, be liable for consequential damages, nor shall **Lufkin Manufacturing's** liability on any claim for any direct, incidental or special damages arising out of, or connected with, sales contract or manufacture, sale, delivery, or use of the products shall exceed the purchase price of the goods.



Lufkin Manufacturing
20020 Interstate 30
Benton, AR 72019
Ph: (501) 316-4040
Fax: (501) 634-4141
www.lufkinmfg.com